

# FMPS20 20°/GHz

| F  | ρ | а | t |   | r  | ρ | s | • |  |
|----|---|---|---|---|----|---|---|---|--|
| ۰. | c | u | Ľ | u | ۰. | c | 5 | ٠ |  |

- \* Low Insertion Loss
- \* High Power \* High Reliable

Applications: \* Laboratory Test

- \* Transmitter

- \* Instrumentation
  - \* Wireless

### Electrical

| Frequency:                            | DC~18GHz |
|---------------------------------------|----------|
| Impedance:                            | 50Ω      |
| Average Power:                        | 50W      |
| Peak Power <sup>*1</sup> :            | 5KW      |
| [1] Dulco width, Fug. duty system 10/ |          |

[1] Pulse width: 5us, duty cycle: 1%.

| Frequency | VSWR   | Insertion Loss | Phase                        |
|-----------|--------|----------------|------------------------------|
| (GHz)     | (max.) | (dB, max.)     | Adjustment <sup>*2</sup> (°) |
| DC~2      | 1.25   | 0.35           | 0~40                         |
| DC~3      | 1.3    | 0.5            | 0~60                         |
| DC~6      | 1.4    | 0.75           | 0~120                        |
| DC~9      | 1.5    | 1              | 0~180                        |
| DC~12     | 1.6    | 1.25           | 0~240                        |
| DC~18     | 1.6    | 1.5            | 0~360                        |

[2] Phase shift varies linearly corresponding to the frequency. For example, if the maximum phase shift is 360°@18GHz, the maximum phase shift is 180°@9GHz.

### Mechanical


| Size:                   | 70*13*15mm                   |
|-------------------------|------------------------------|
|                         | 2.756*0.512*0.591in          |
| Weight:                 | 50g                          |
| RF Connectors:          | SMA                          |
| Outer Conductor:        | Gold plated brass            |
| Male Inner Conductor:   | Gold plated brass            |
| Female Inner Conductor: | Gold plated beryllium copper |
|                         |                              |

### Environmental

Operating Temperature: Non-operating Temperature:

-10~+50°C -40~+70°C

### **Outline Drawings**

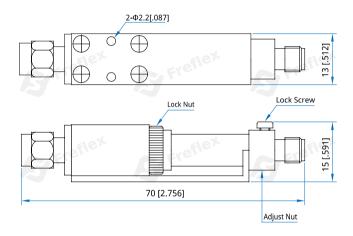

Unit: mm [in] Tolerance: ±0.2mm [±0.008in]

### Usage

- 1. Tighten the lock nuts.
- 2. Connect both ends to cables.
- 3. Release the lock nuts.
- 4. Turn the adjust nut to adjust phase.
- 5. Tighten the lock nuts.

## How To Order

FMPS20-X-Y

X: Frequency in GHz Y: Connector type

Connector naming rules: S - SMA

Examples: To order a phase shifter, DC~6GHz, SMA male to SMA female, specify FMPS20-6-S.

Customization is available upon request.